



INSTRUCTION MANUAL

Super Quiet Air Pump



Before installing the air pump, please read the following instructions in detail, to use it in accordance with the following operation requirements.

- (1)** Do not immerse the pump in the water and never apply oil to the pump.
- (2)** If the pump accidentally falls into the water, cut off the power immediately.
- (3)** Large air volume and extending product life can be obtained by cleaning regularly and replacing flexible pipes or an air stone.
- (4)** Do not use if the power cord is damaged.
- (5)** The pump and all electrical power must be cut off before putting your hands into the water.
- (6)** The pump must be used above the water level. If the pump is using below the water level, a stop valve must be installed in the middle of the pipe to avoid the water flow back through the pipe.

SPECIFICATION**EN**

Barcode	Power/W	Air flow
8719138037667	12W	2*4.5L/min
8719138037674	8W	2*3.5L/min
8719138037681	3.5W	2*3.4L/min
8719138037698	3W	3L/min

INSTRUCTIONS FOR USE

(1) Connect pump to an air stone or a filter via the air pipe

(2) Put the air stone/filter into water.

(3) Plug into 220–240V power point

NOTE: The air stone, filter, the stop valve and air pipes mentioned above are not included, please purchase separately.

TROUBLE SHOOTING

SYMPTON	POSSIBLE CAUSES	CORRECTIVE ACTION
Pump does not work properly	Whether the power is connected	Please connect the rated voltage according to the product properly
The air volume is reduced	Whether the air pipe is break off	Change a new air pipe
The temperature becomes higher	Whether the air pipe has blocked higher	Change a new air pipe
Abnormal sound	Whether it has a frictional collision with other objects	Clean up rubbish on the machine, internal magnet or motor